


RS1 PADLOCK MODEL 800-30

## PROGRAMMING

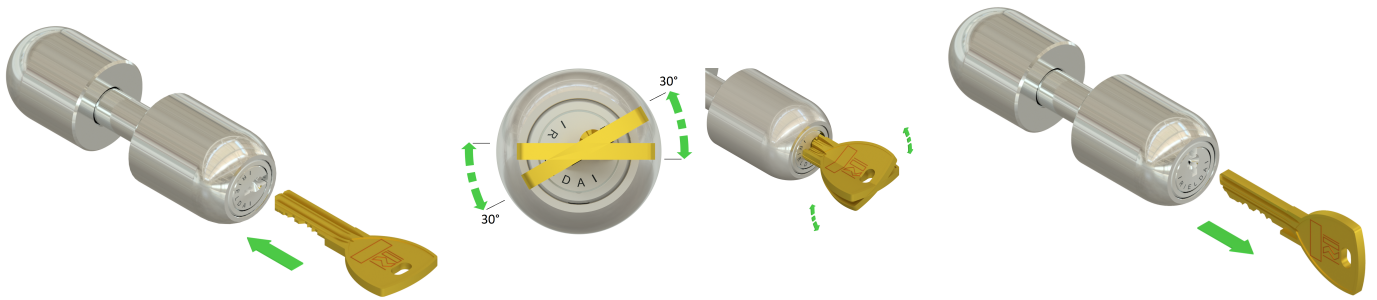

- Insert the gold Programming key
- Turn the gold key back and forth a few times without compensating the rotation (about 30°)
- Rotate the key to the vertical position

- Remove the key
- The lock is now Programmed
- Put away the gold Programming key in a safe place
- Use the silver key

RS1 PADLOCK MODEL 800-30

## RE-PROGRAMMING



- Insert the gold Programming key
- Rotate the key from the vertical position at beat

- Remove the key
- The lock is now ready to be programmed with a new key